

BED FRAME

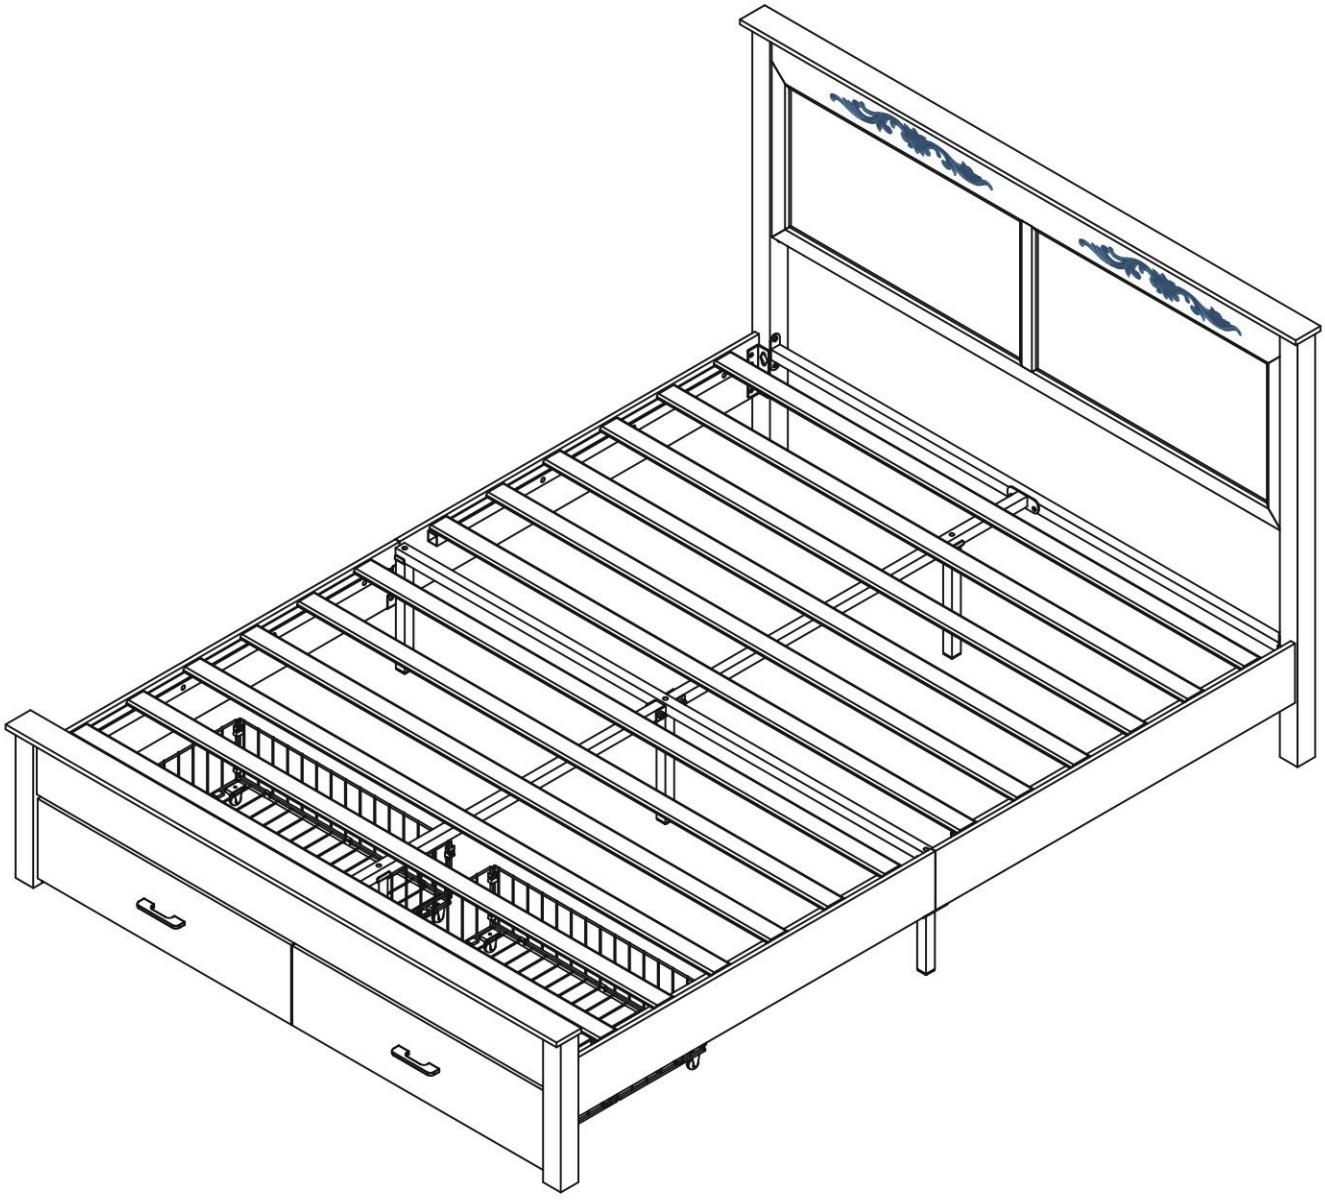

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

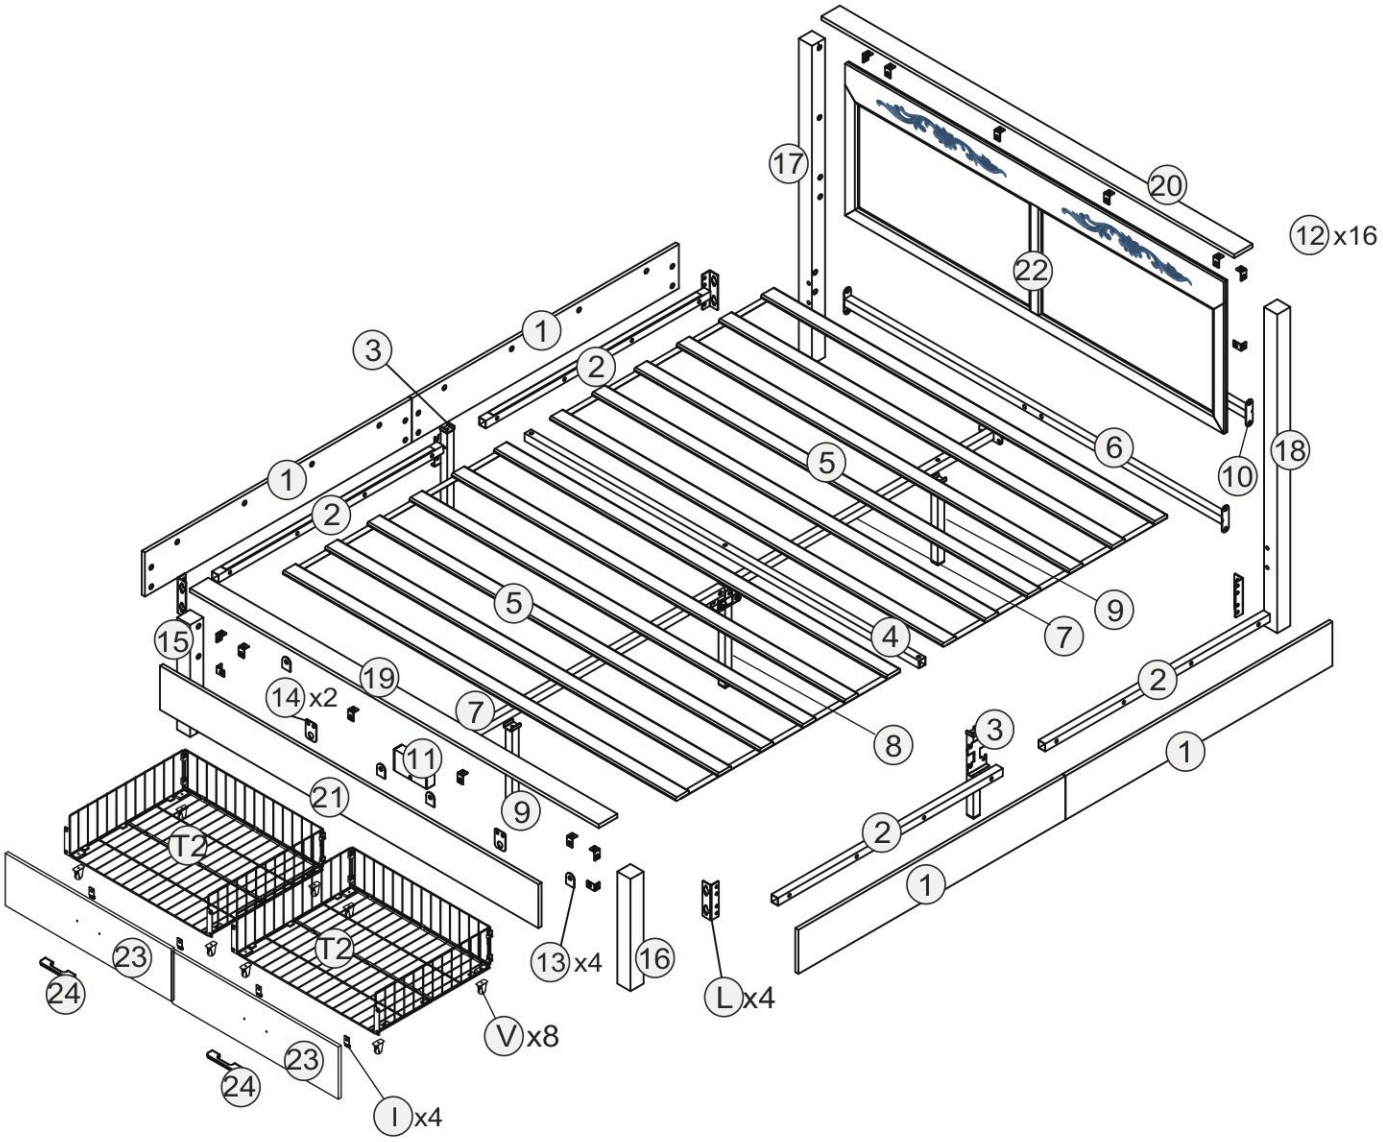

B664


Important Note

HARDWARE NOTE :


1.Two or more people are required for assembly

2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.


Components

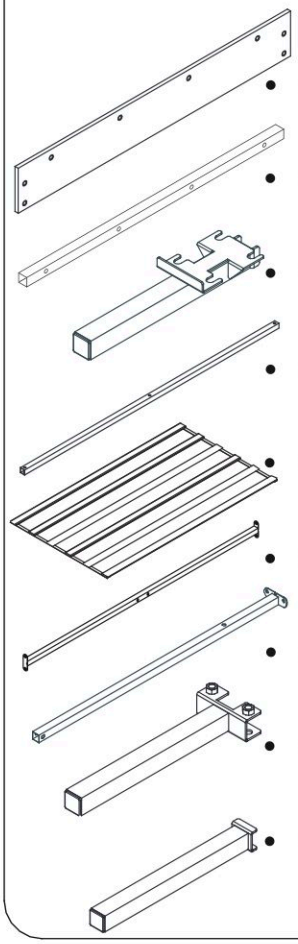

1 x4pcs
2 x4pcs
3 x2pcs
4 x1pc
5 x2pcs
6 x1pc
7 x2pcs
8 x1pc
9 x2pcs

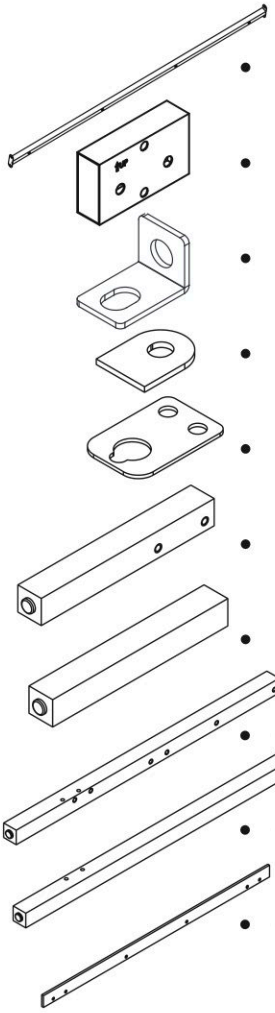

10 x1pc
11 x1pc
12 x16pcs
13 x4pcs
14 x2pcs
15 x1pc
16 x1pc
17 x1pc
18 x1pc
19 x1pc

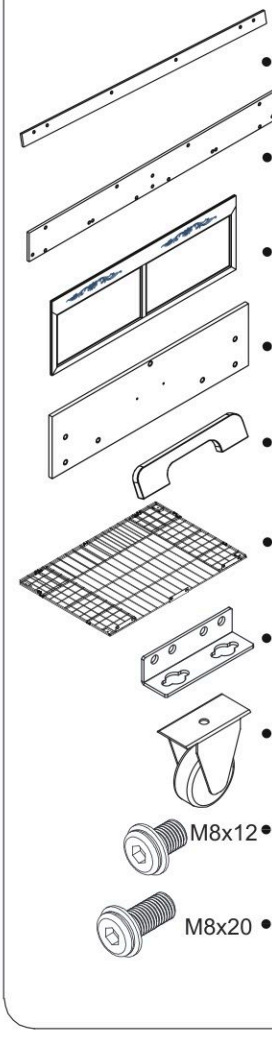


20 x1pc
21 x1pc
22 x1pc
23 x2pcs
24 x2pcs
T2 x2pcs
L x4pcs
V x8pcs
M8x12 A x60pcs
M8x20 B x24pcs




M8x33 C x24pcs
M8x40 white zinc D x2pcs
M8x45 E x7pcs
M4x10 F x8pcs
M4x18 G x4pcs
M8x14 H x2pcs
I x4pcs
M4 J x1pc
M8 K x1pc

1

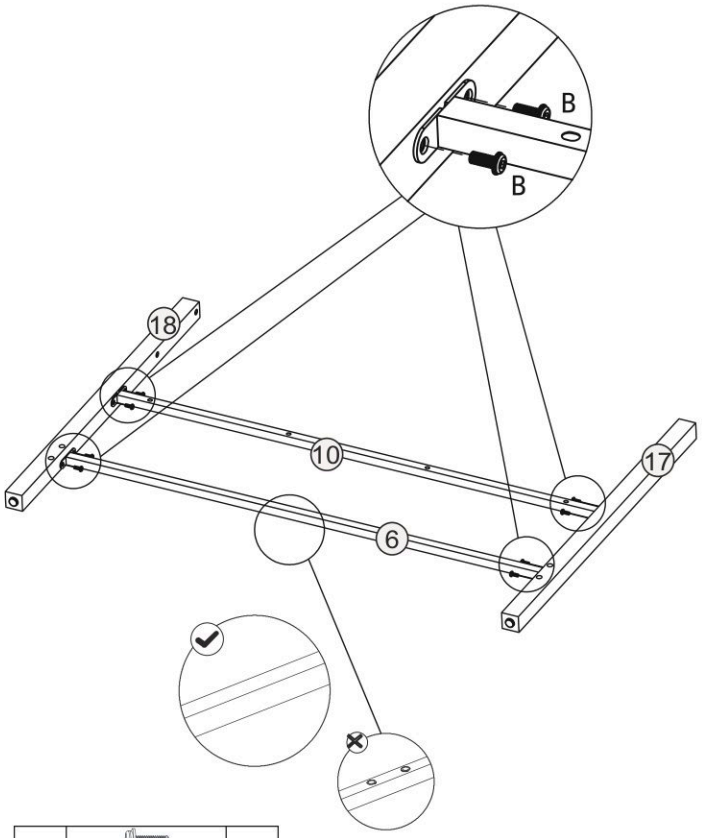


B	M8x20	8pcs

2

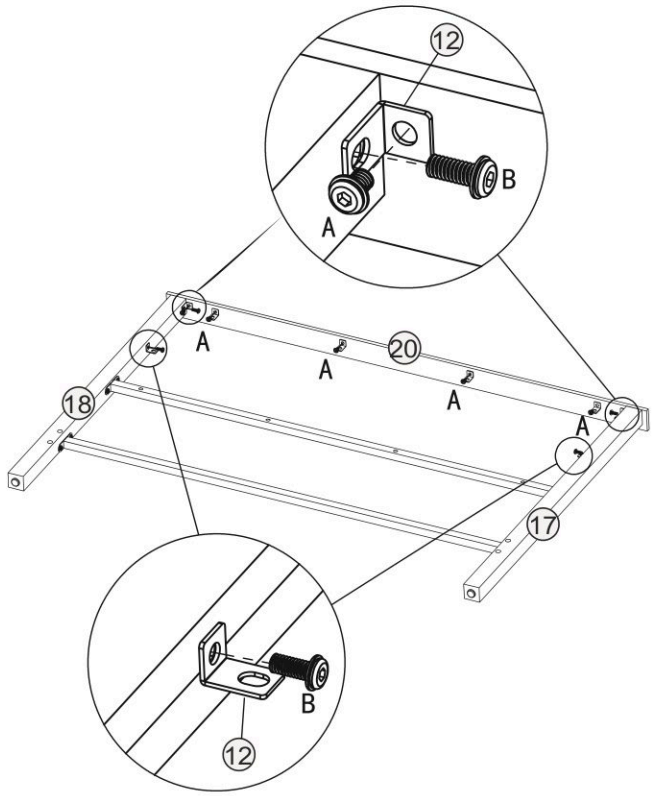

A	M8x12	6pcs
B	M8x20	4pcs


3

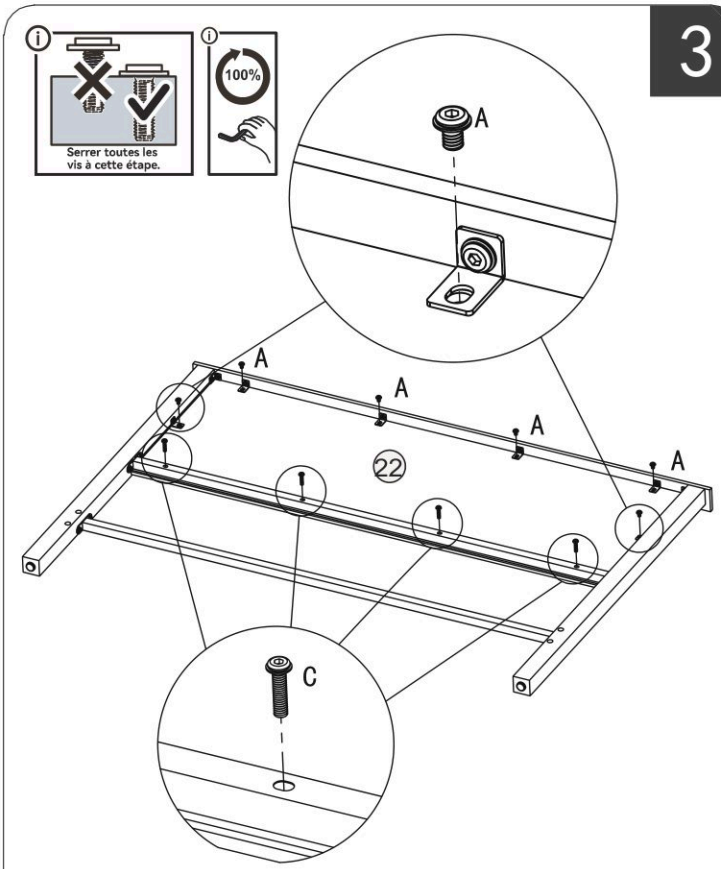

A	M8x12	6pcs
C	M8x33	4pcs

4

x2

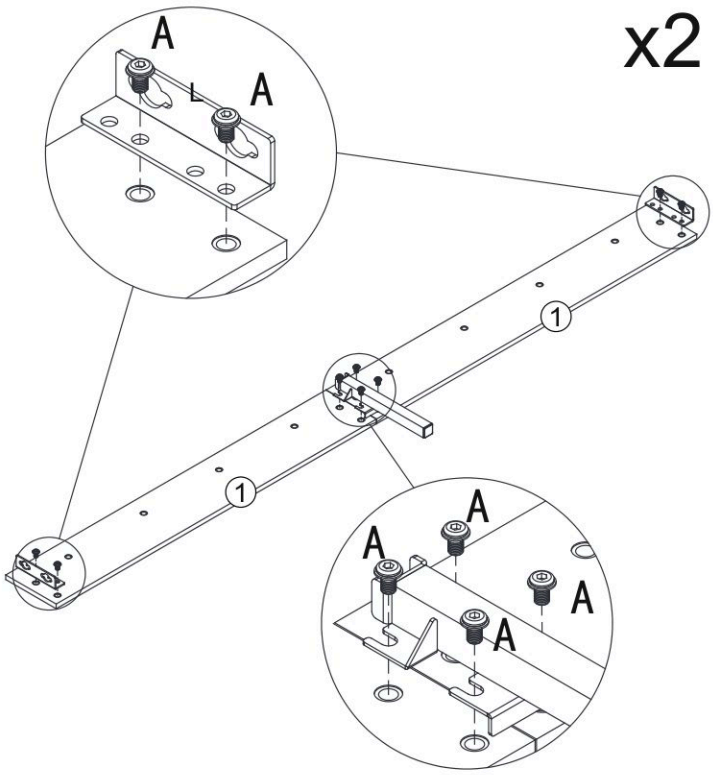


A	M8x12	16pcs

5


x2

Velcro facing the top

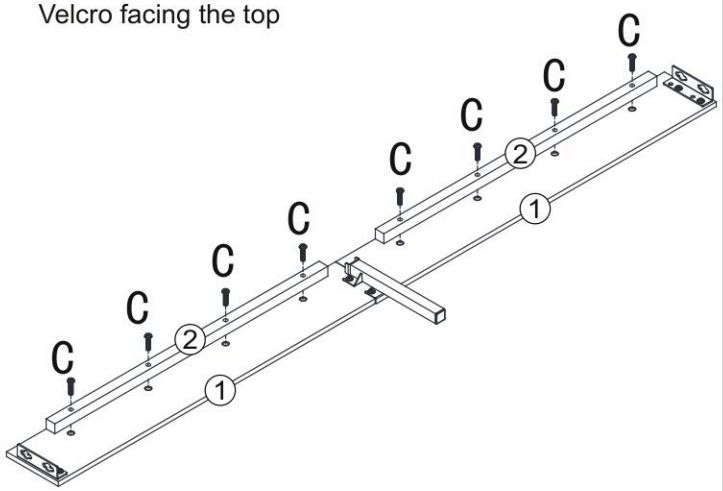


C	M8x33	16pcs

6

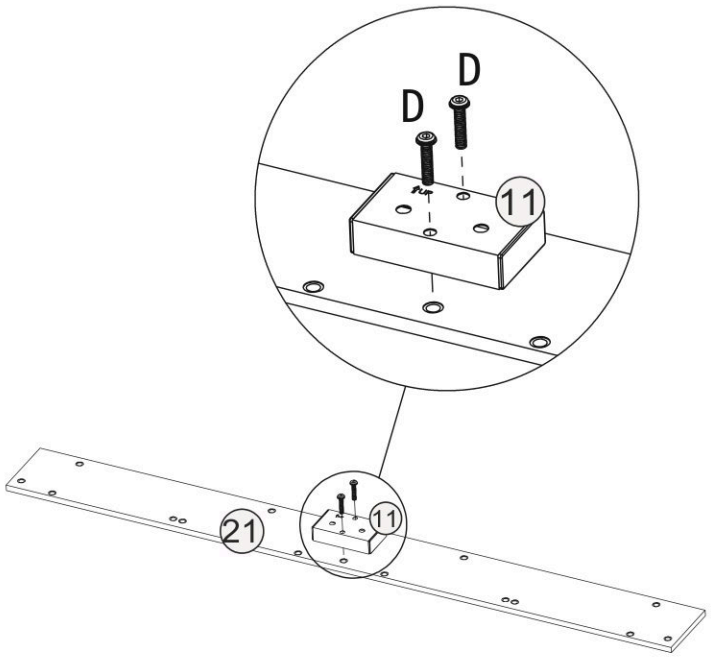


D	M8x40	2pcs	white zinc

7

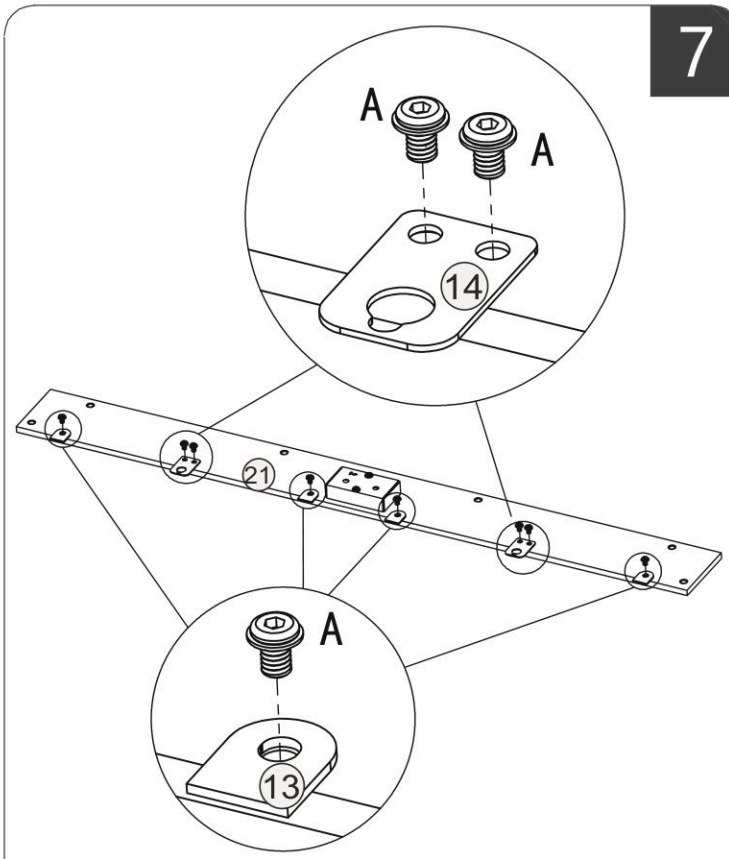


A	M8x12	8pcs

8

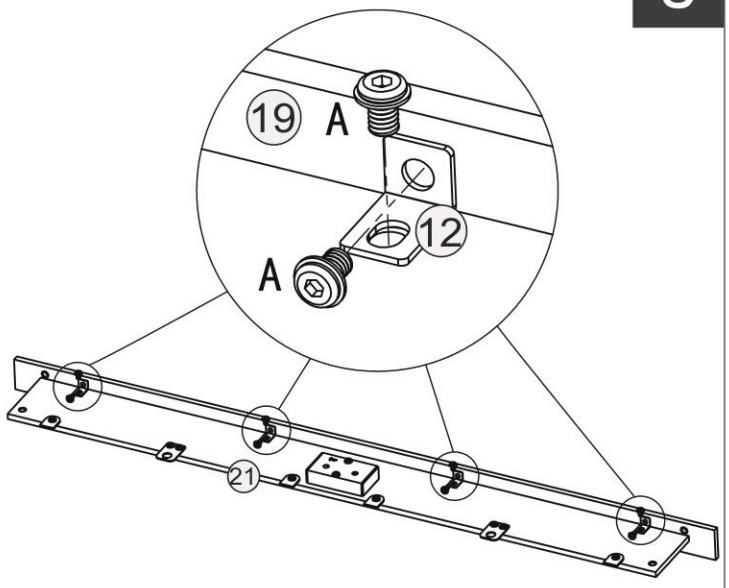


A	M8x12	8pcs

9

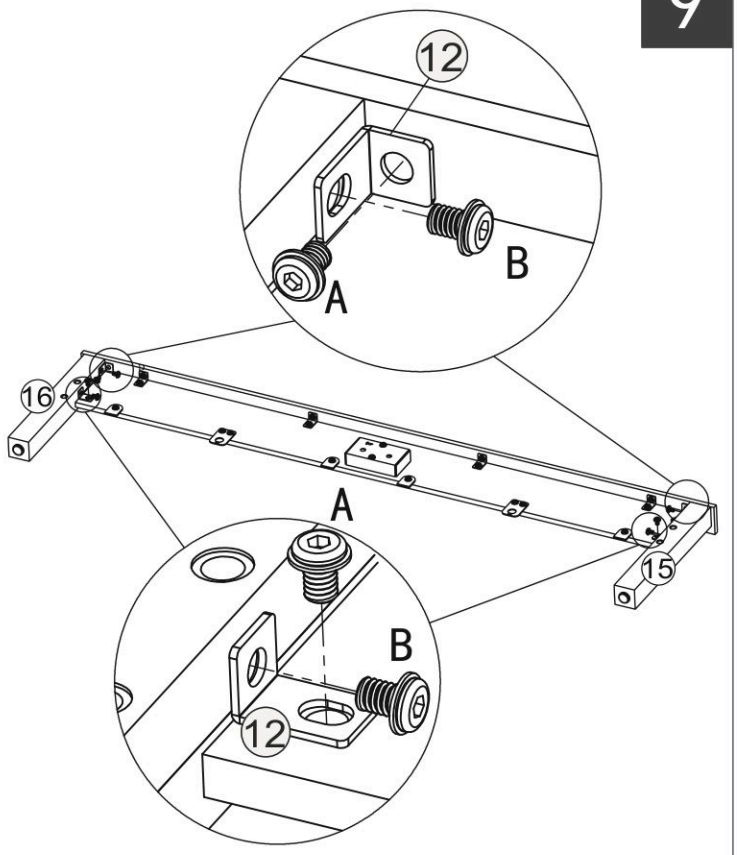

A	M8x12	4pcs
B	M8x20	4pcs

10

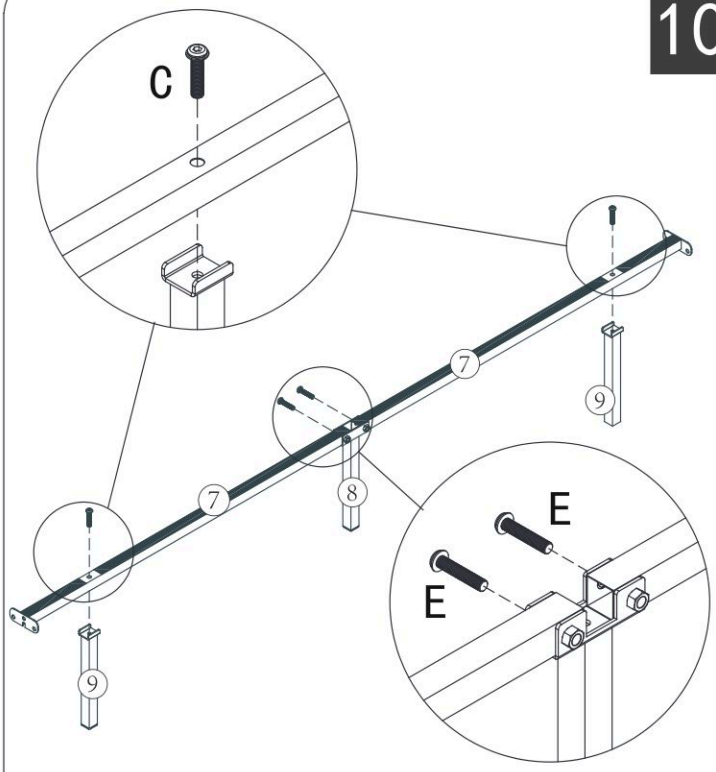


C	M8x33	2pcs
E	M8x45	2pcs



11




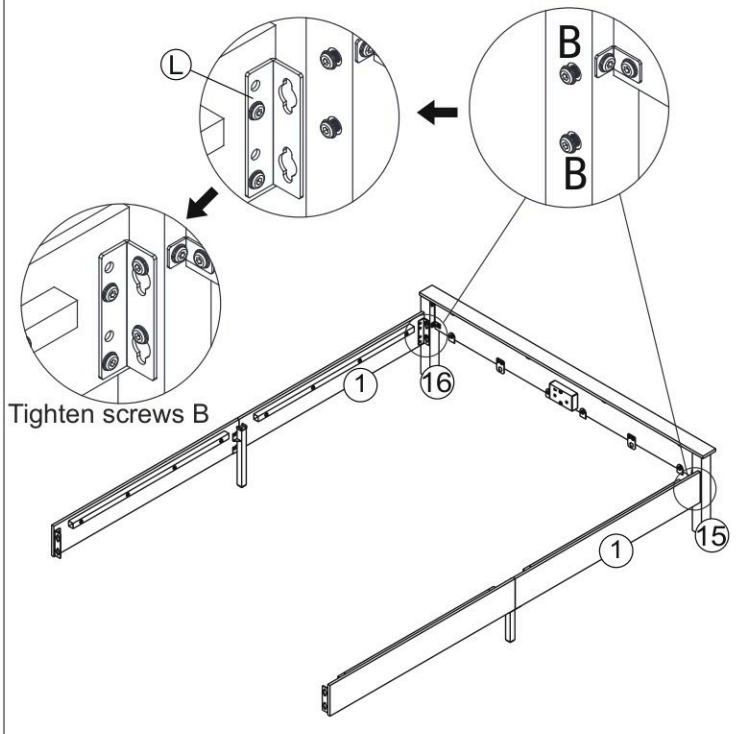

B	M8x20	4pcs


12



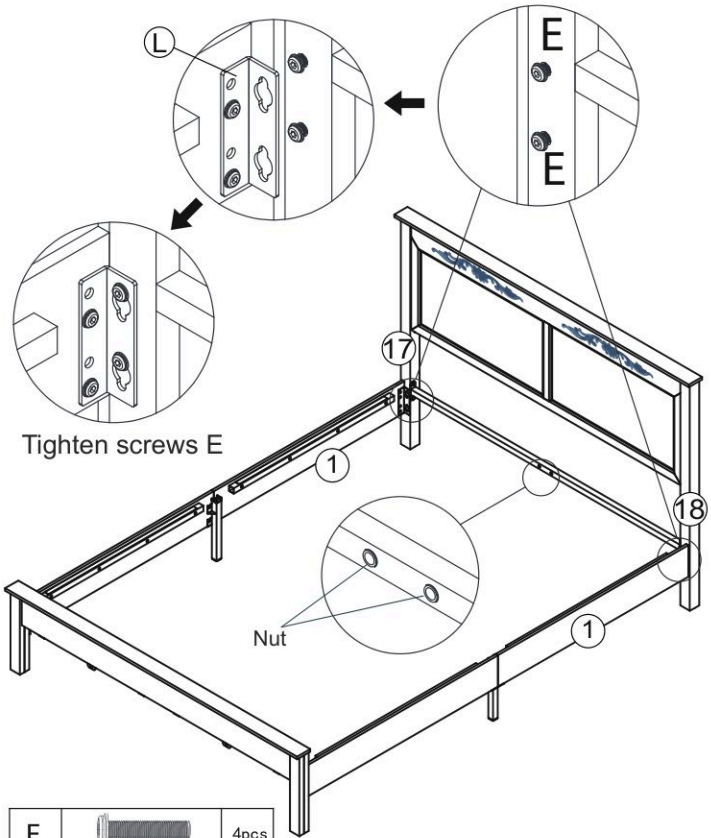


E	M8x45	4pcs

13

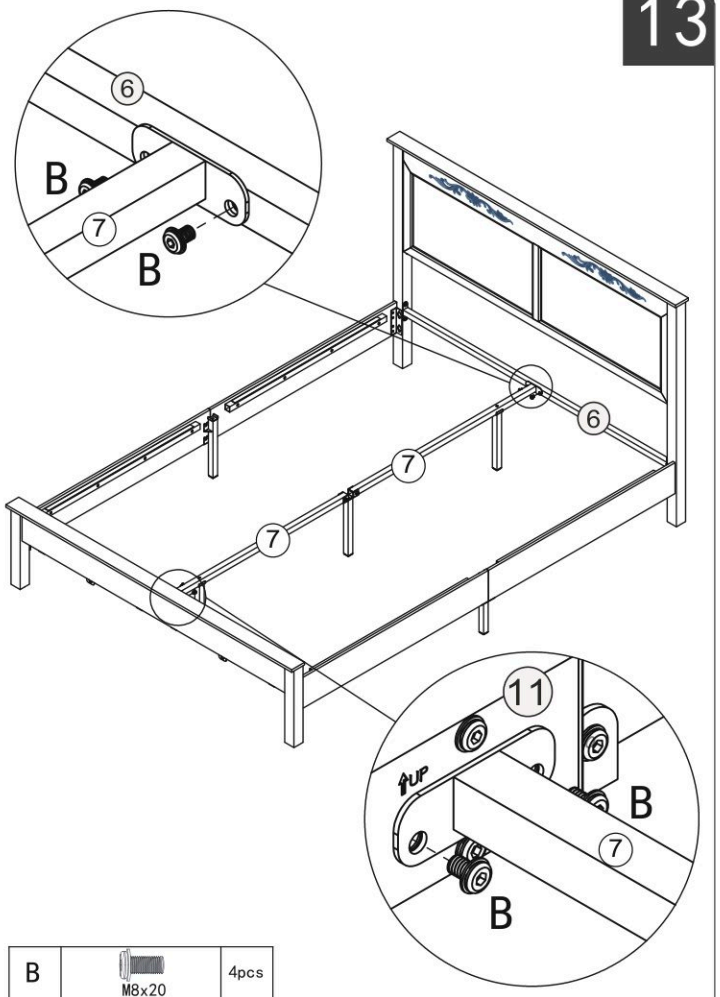


B	M8x20	4pcs

14

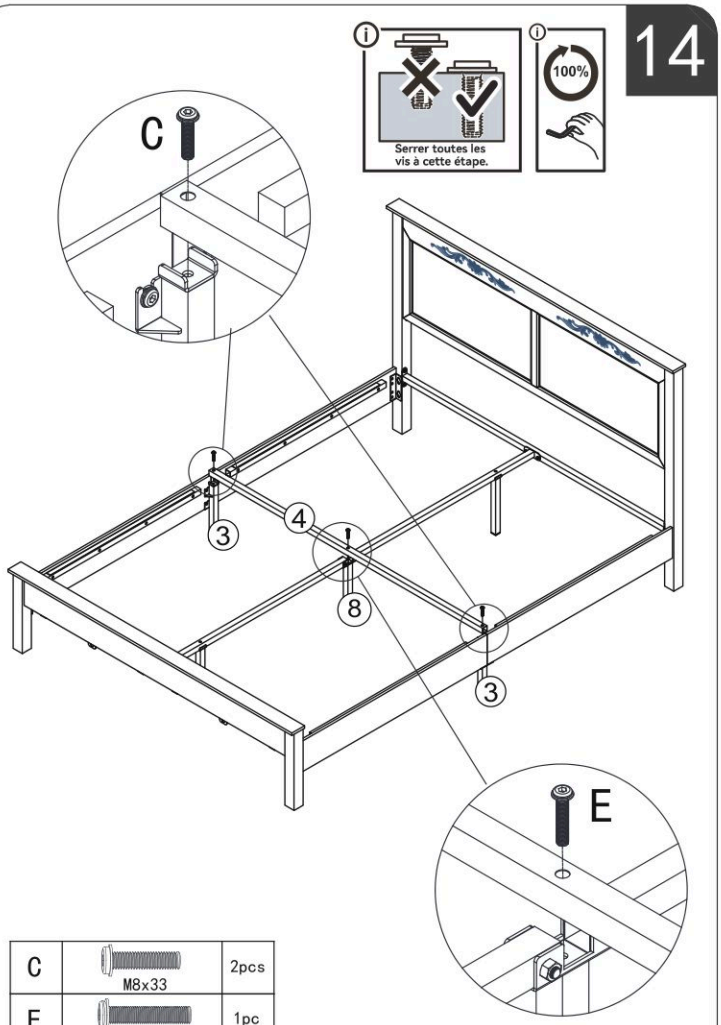


C	M8x33	2pcs
E	M8x45	1pc

15

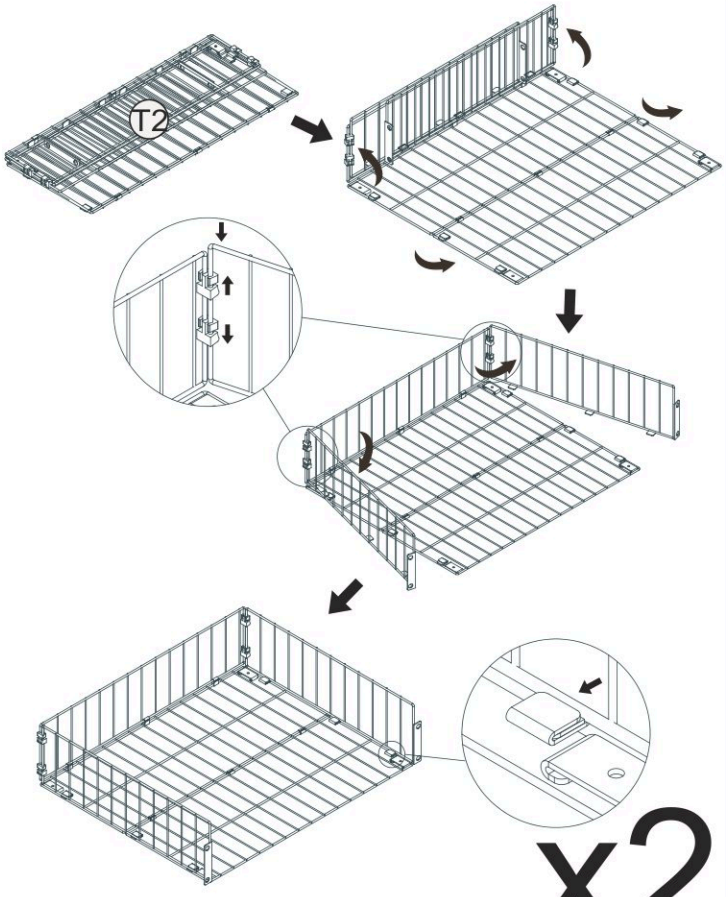

x2


16

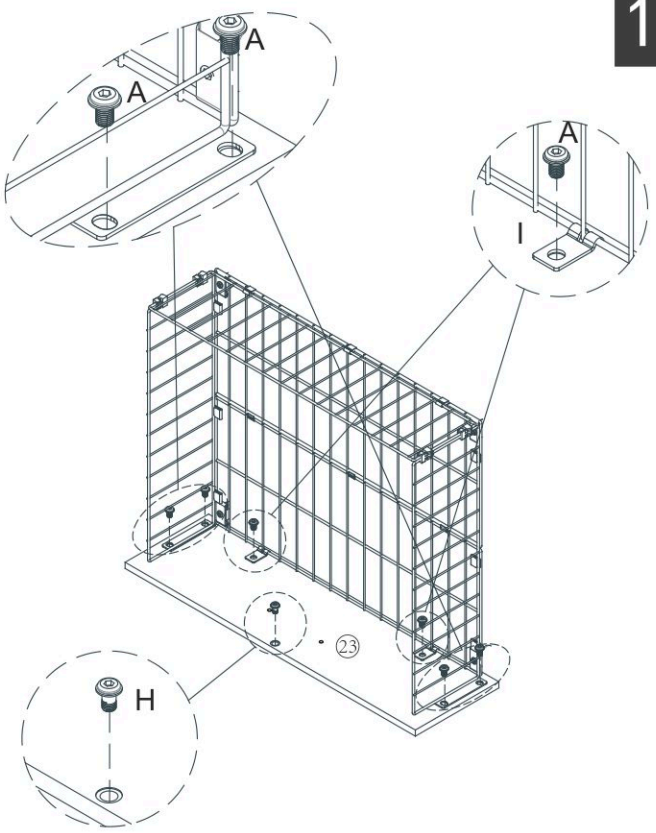

A	M8x12	12pcs
H	M8x14	2pcs
I		4pcs

x2


17

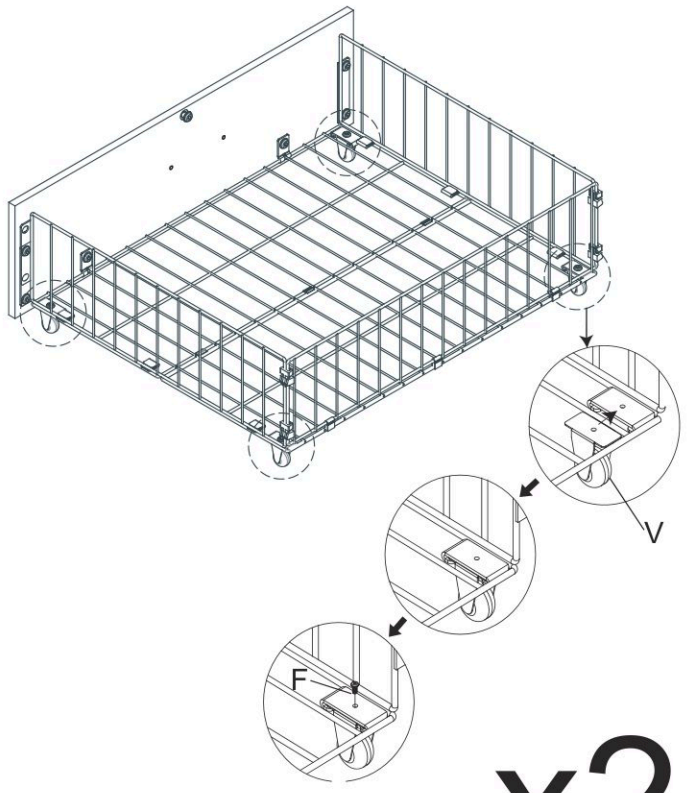

x2

F	M4x10	8pcs


18

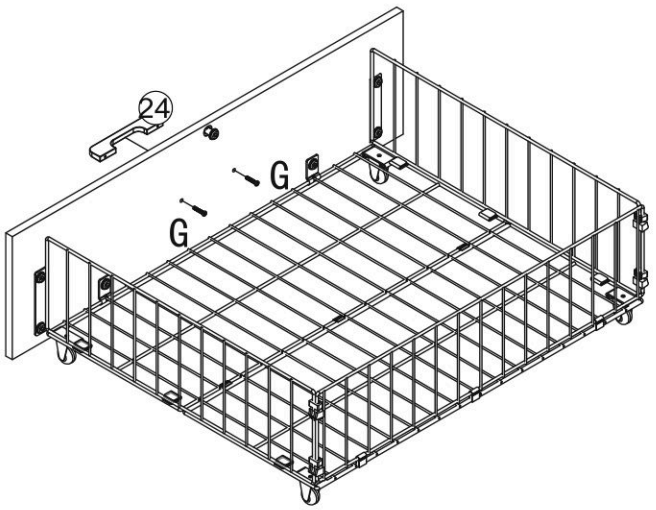


x2

G	M4x18	4pcs

19

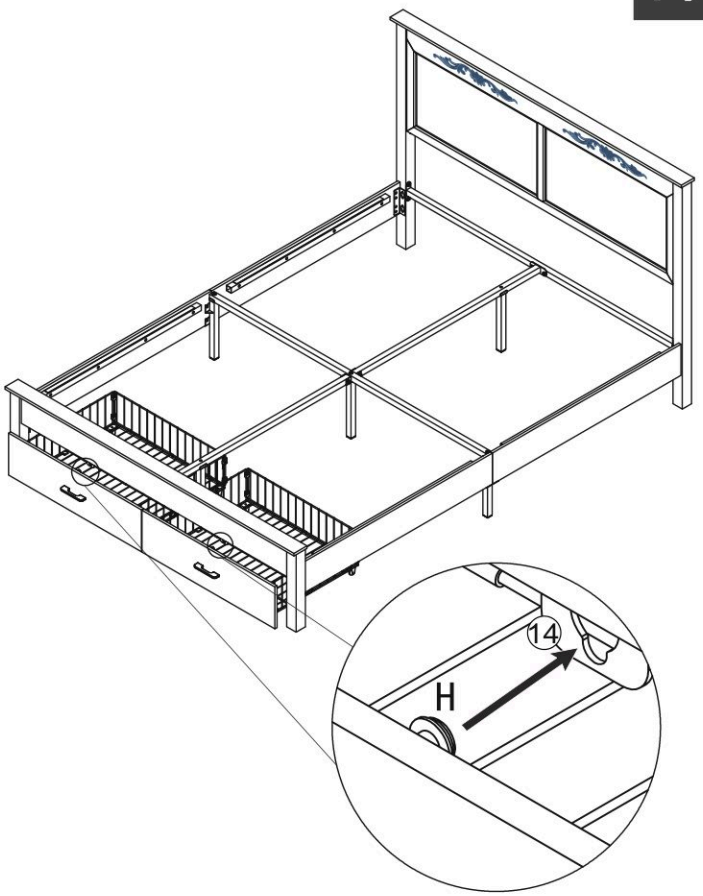

20

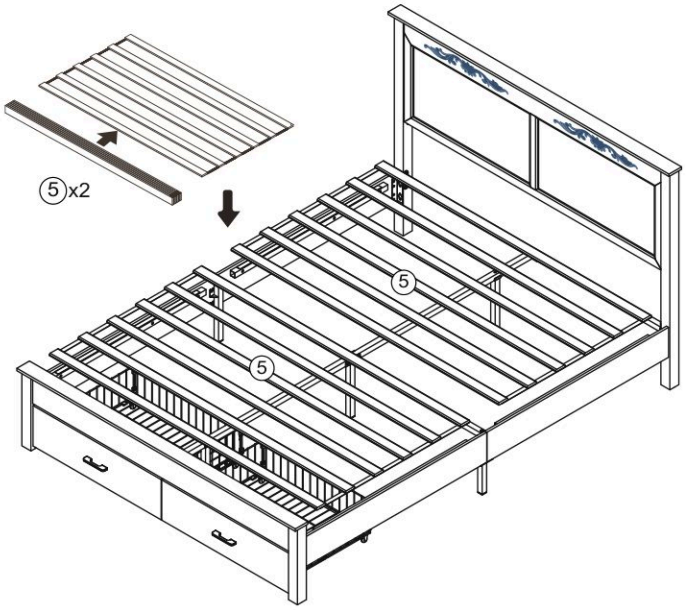

21

