

BED FRAME

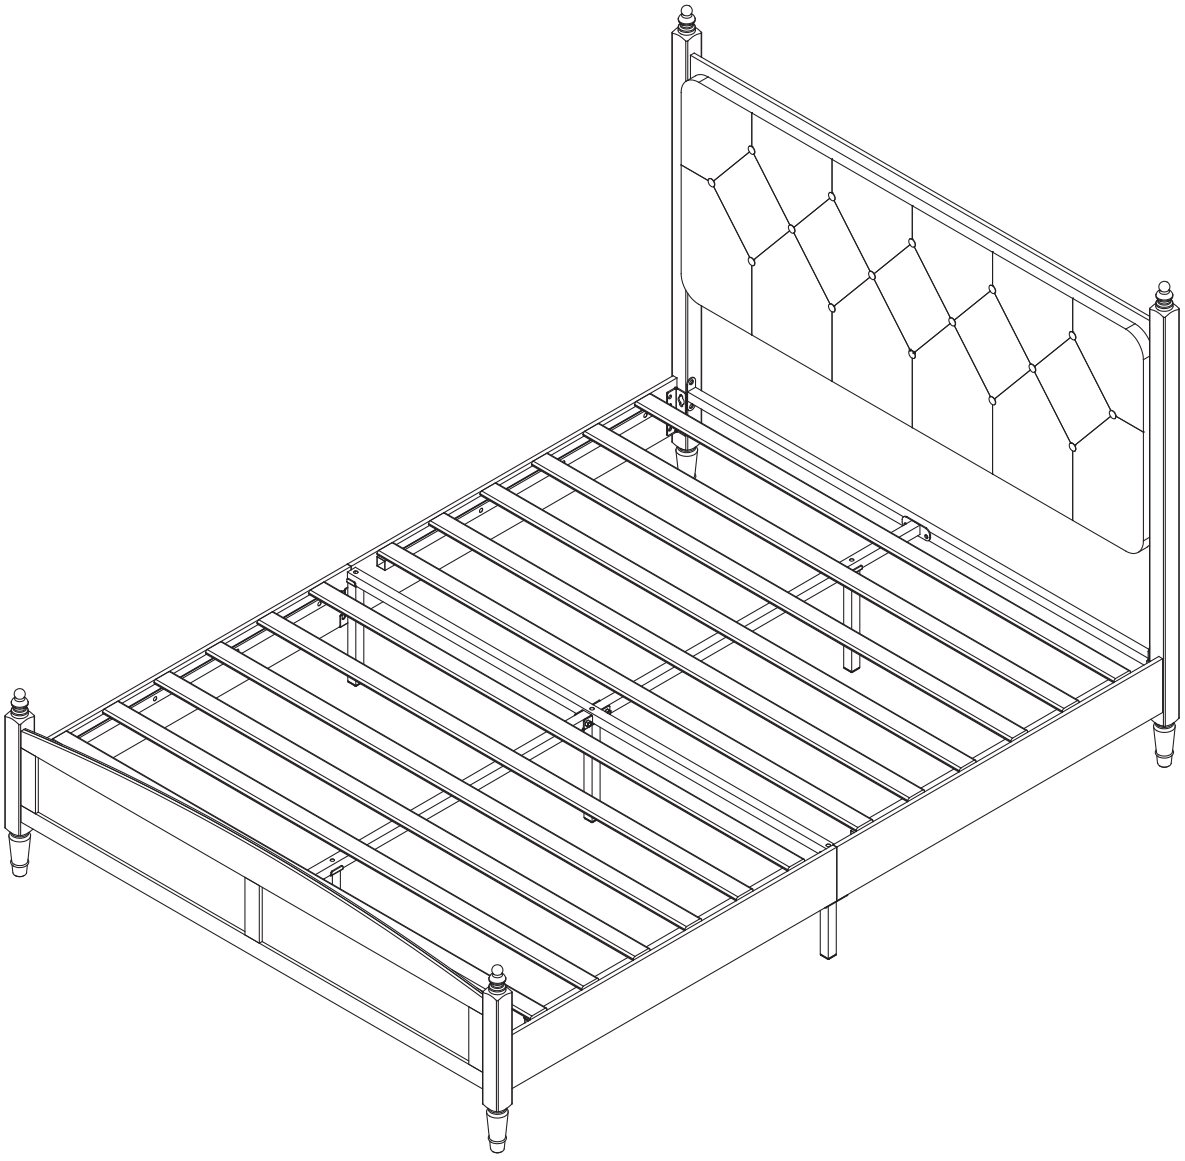

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

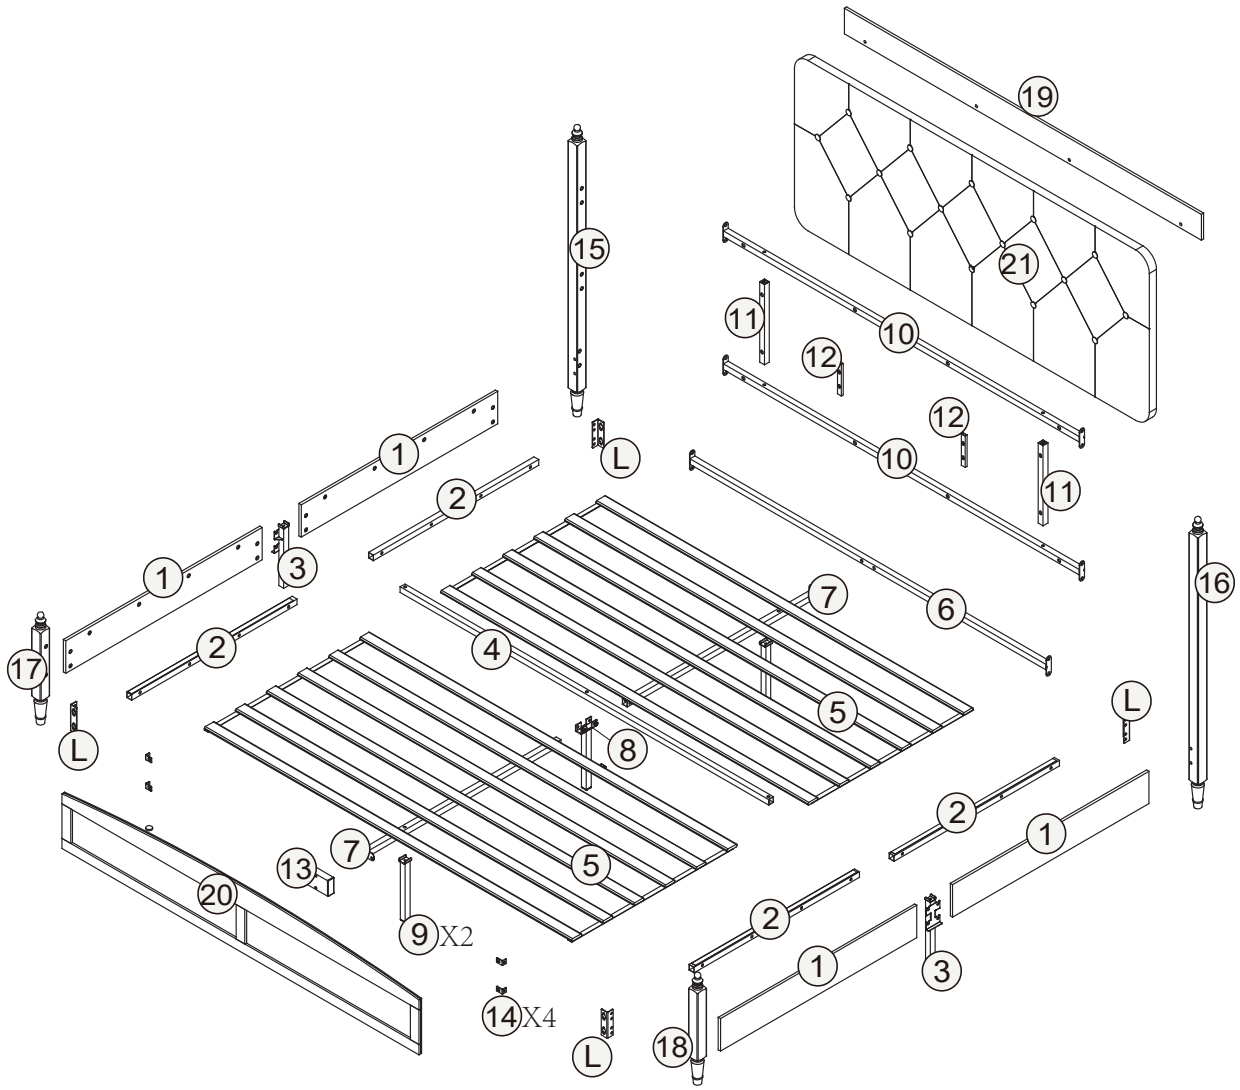

B663-Q


Important Note

HARDWARE NOTE :


1.Two or more people are required for assembly

2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.


Components

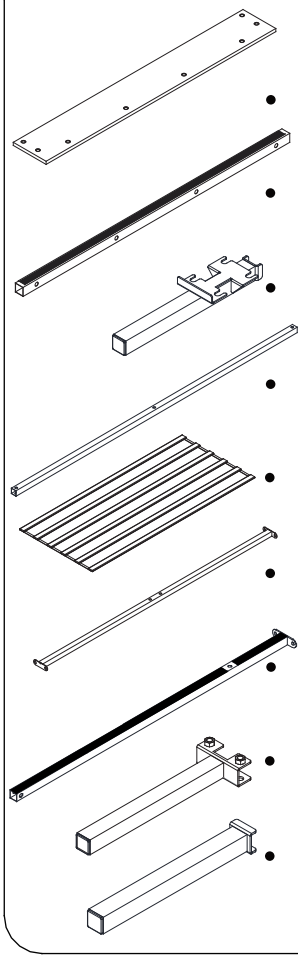


1 x4pcs
2 x4pcs
3 x2pcs
4 x1pc
5 x2pcs
6 x1pc
7 x2pcs
8 x1pc
9 x2pcs

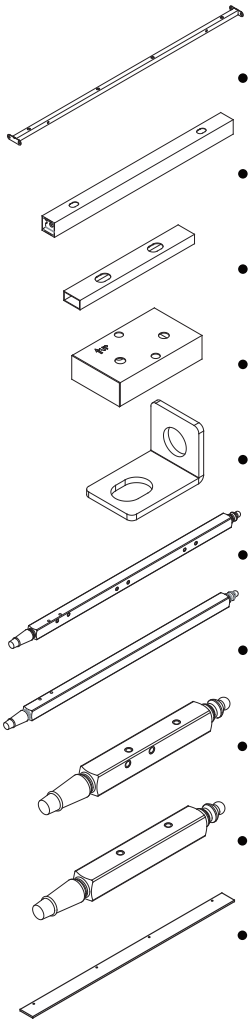

10 x2pcs
11 x2pcs
12 x2pcs
13 x1pc
14 x4pcs
15 x1pc
16 x1pc
17 x1pc
18 x1pc
19 x1pc

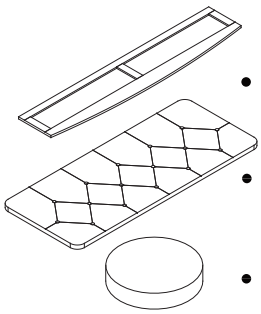


20 x1pc
21 x1pc
22 x4pcs
L x4pcs

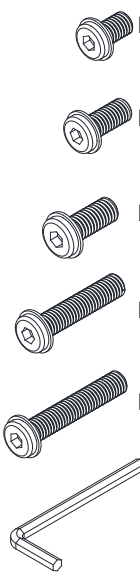


M8x12 A x20pcs
M8x20 White Zinc B x24pcs
M8x25 C x8pcs
M8x35 White Zinc D x20pcs
M8x40 E x25pcs
5x5 F x1pc

1

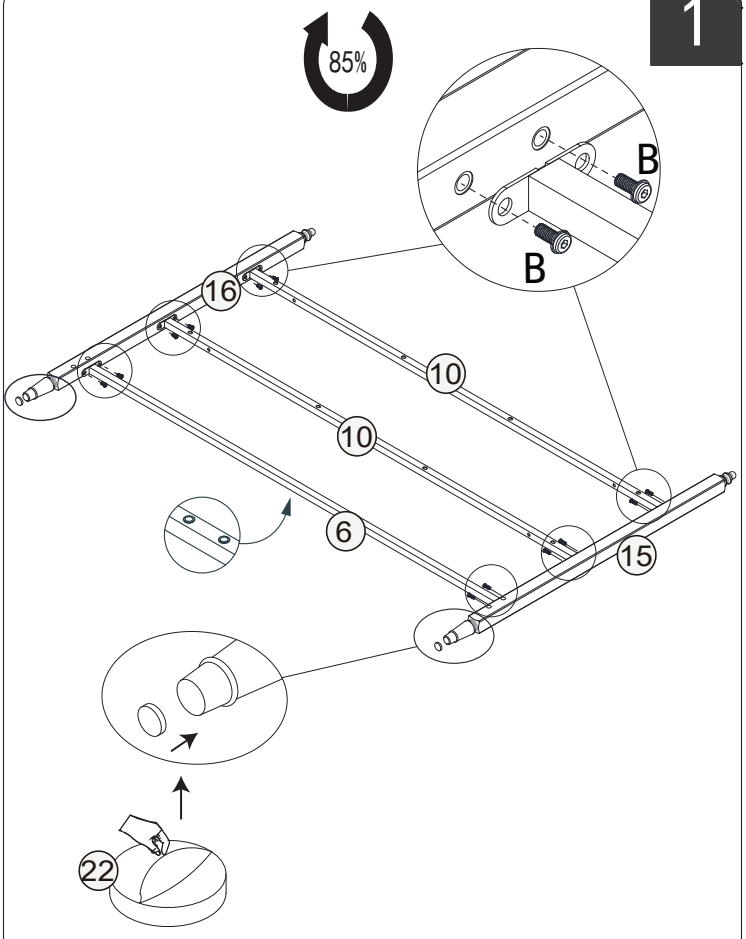


B	M8x20	12pcs	White Zinc

2

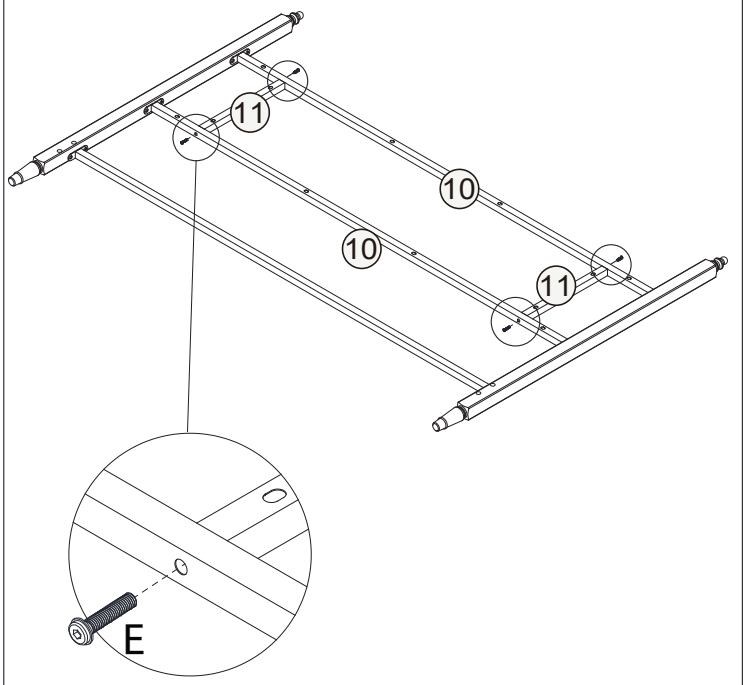


E	M8x40	4pcs

3

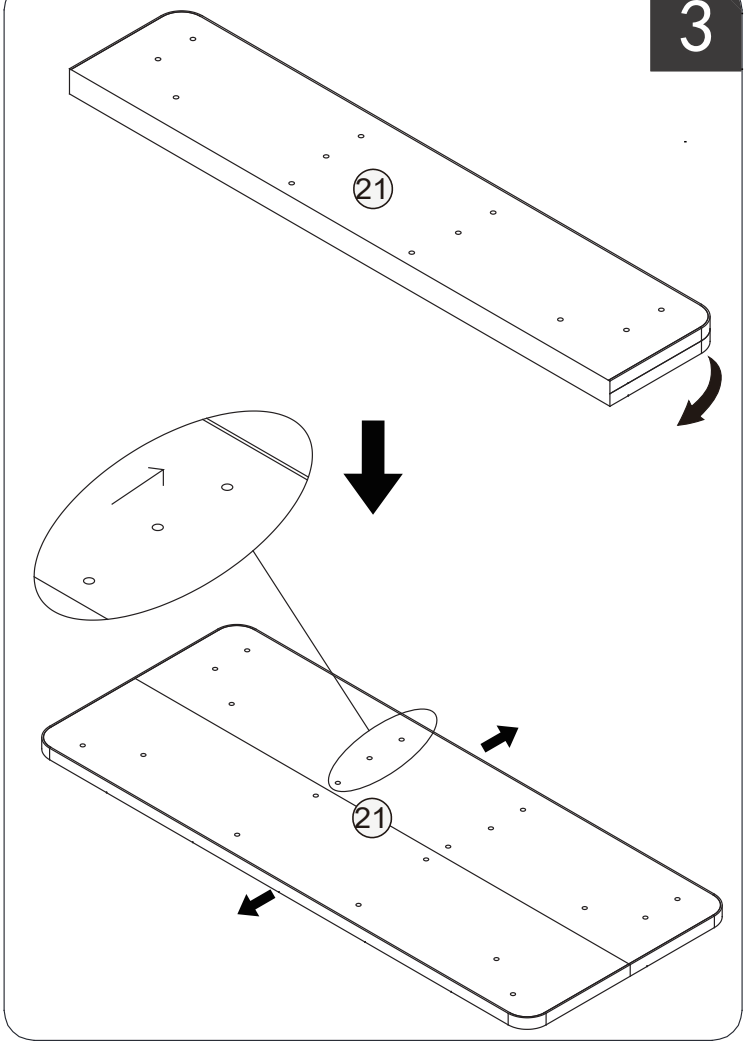


4

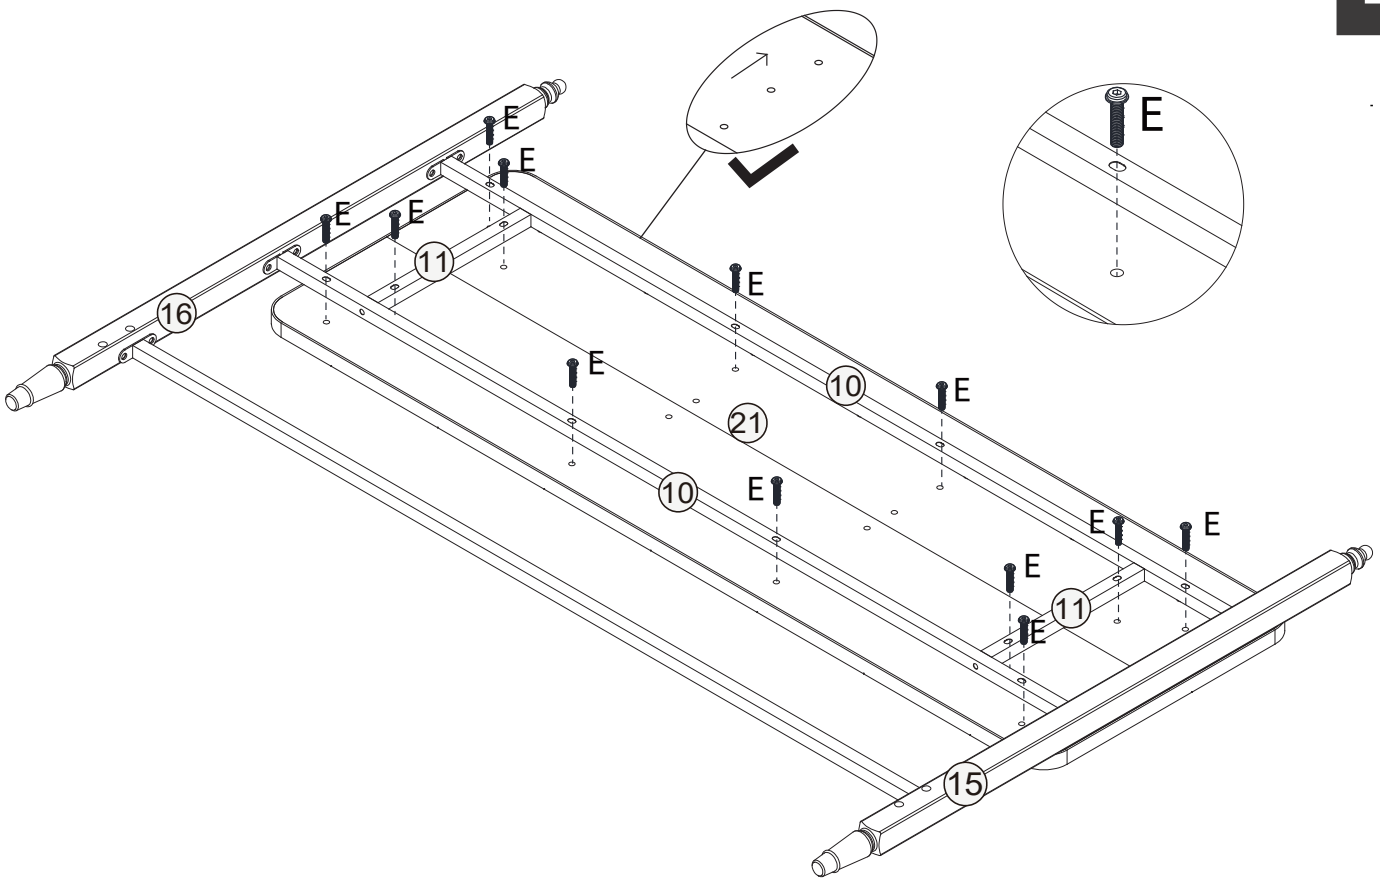


E	M8x40	12pcs

5

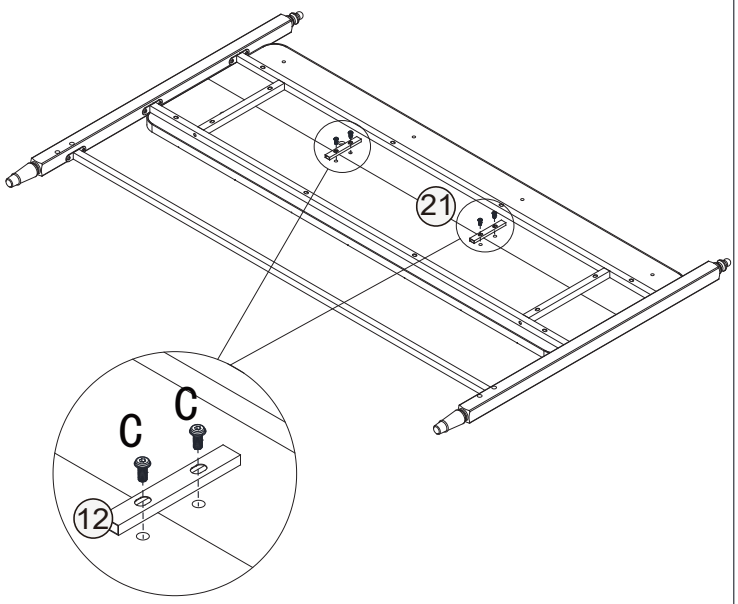

C	M8x25	4pcs


6

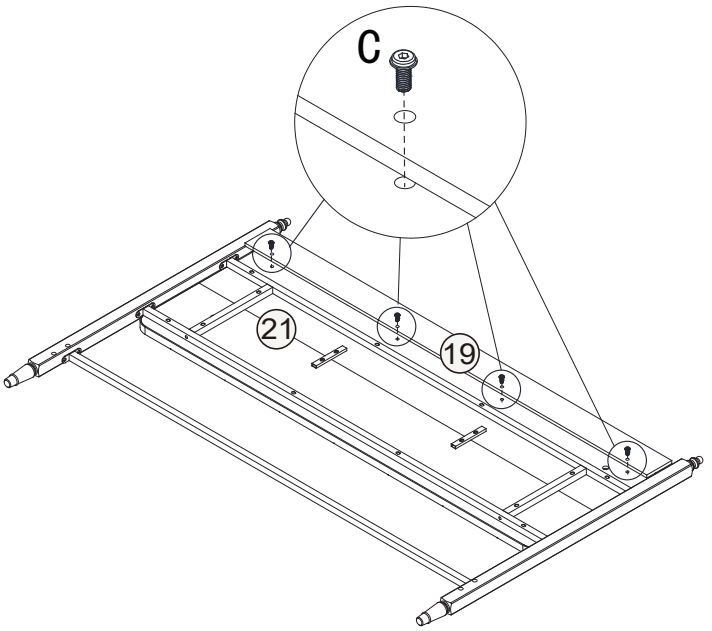

C	M8x25	4pcs

7


x2

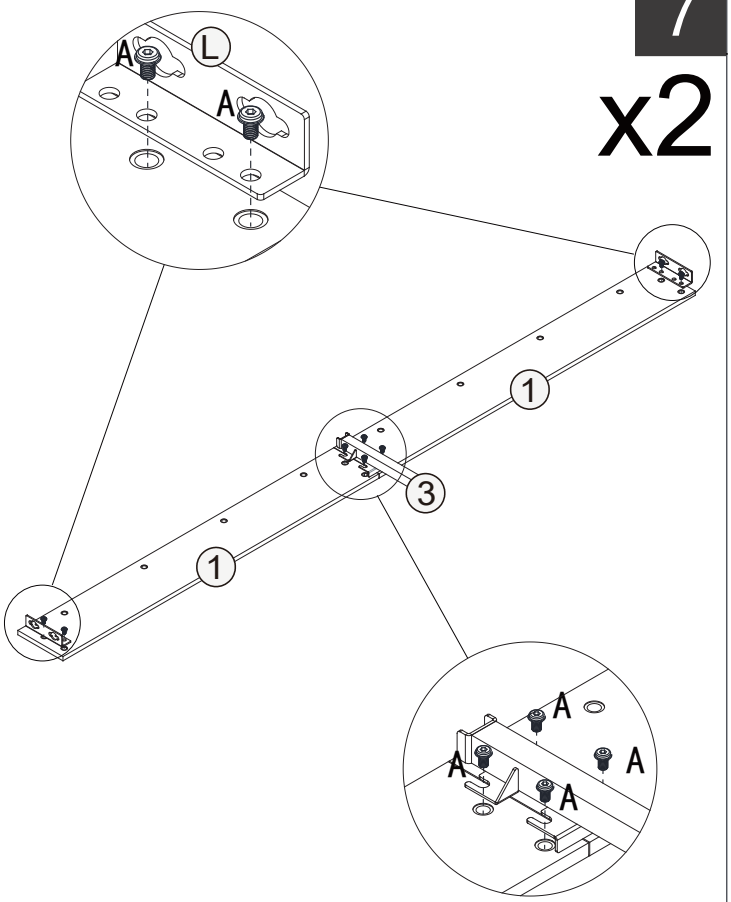

A	M8x12	16pcs


8

x2

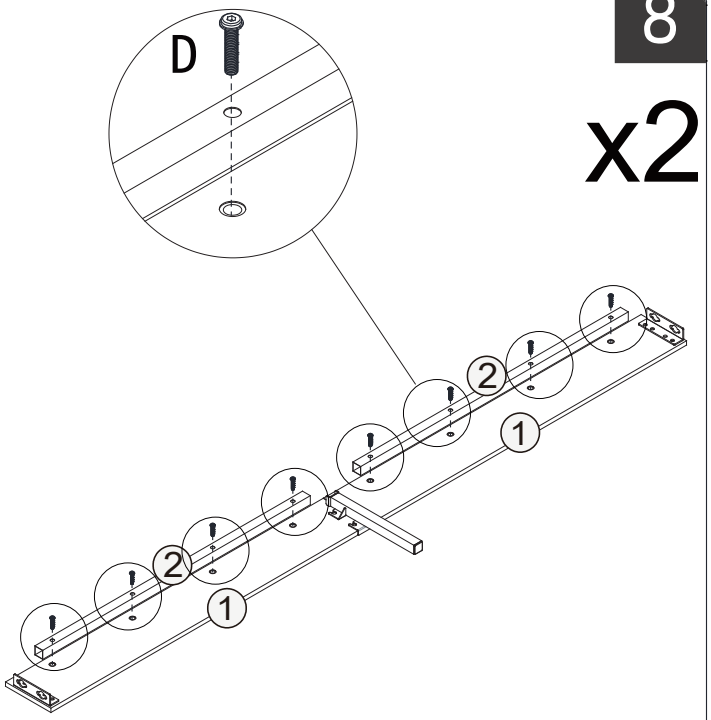

D	M8x35	16pcs	White Zinc


9

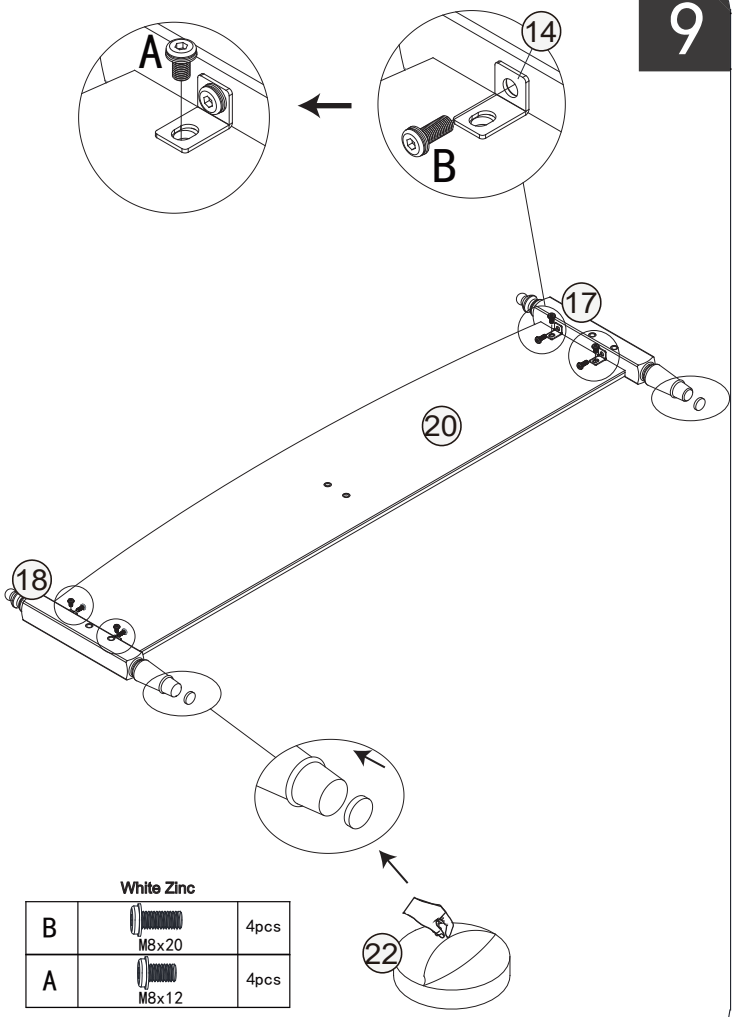

White Zinc


B	M8x20	4pcs
A	M8x12	4pcs

10

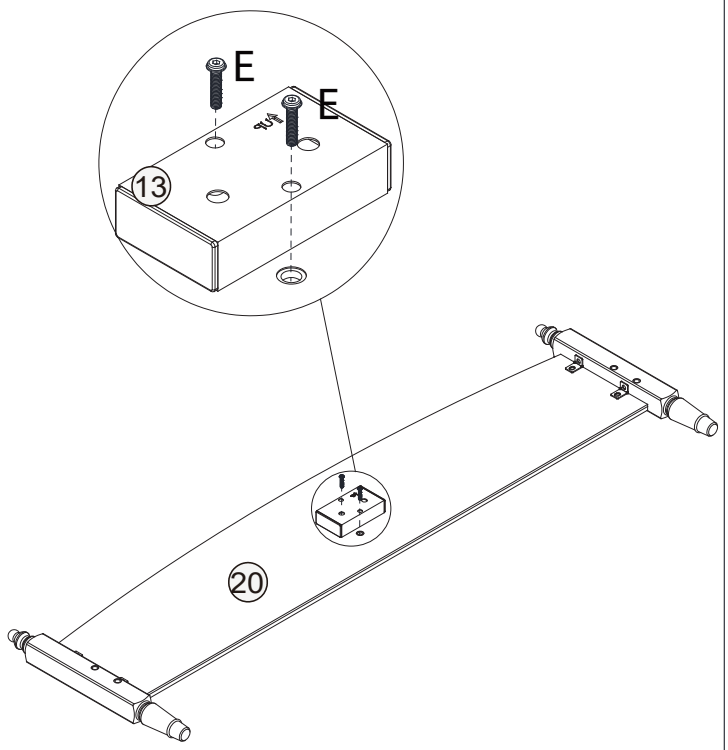

E	M8x40	2pcs


11

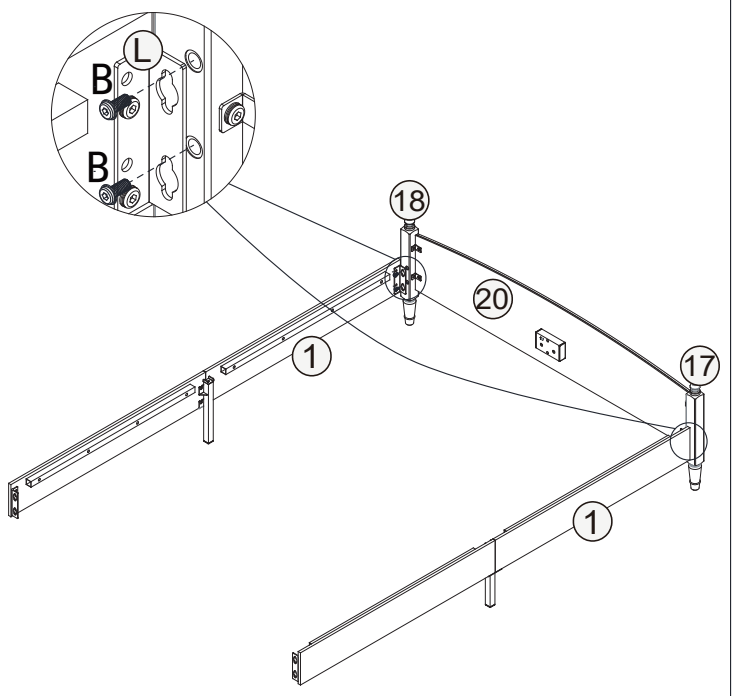

B	M8x20	4pcs


White Zinc

12

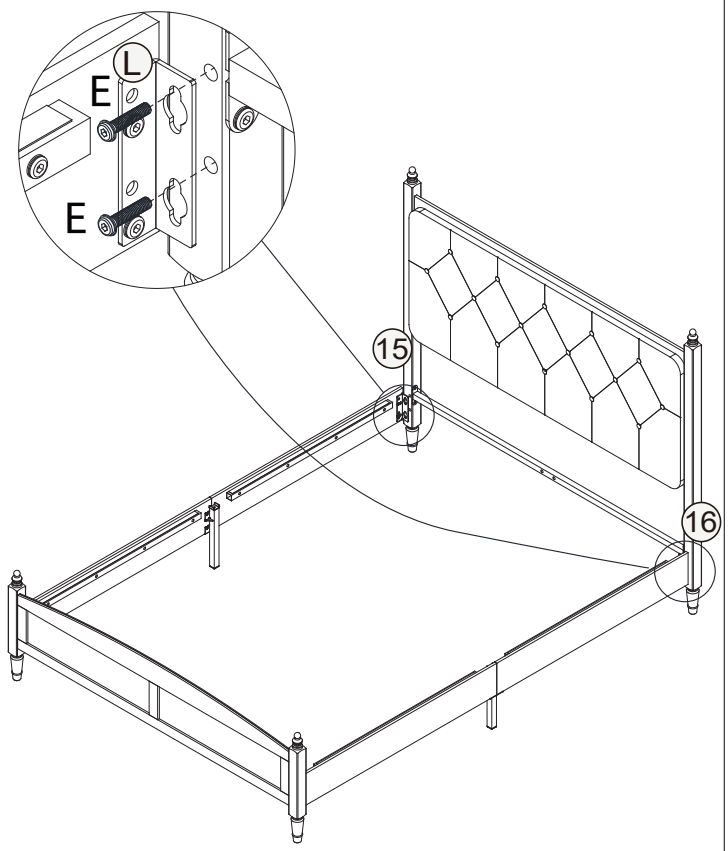


E	M8x40	4pcs

13

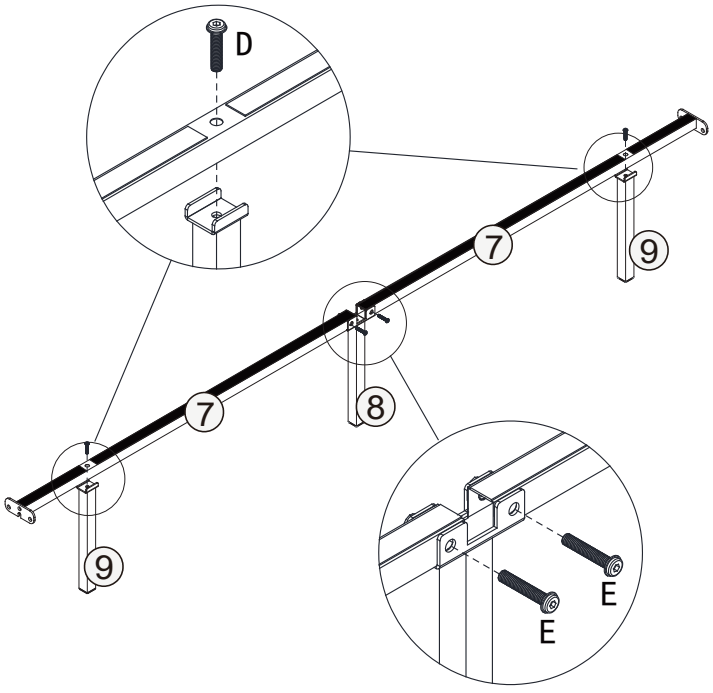


D	M8x35	2pcs	White Zinc
E	M8x40	2pcs	

14

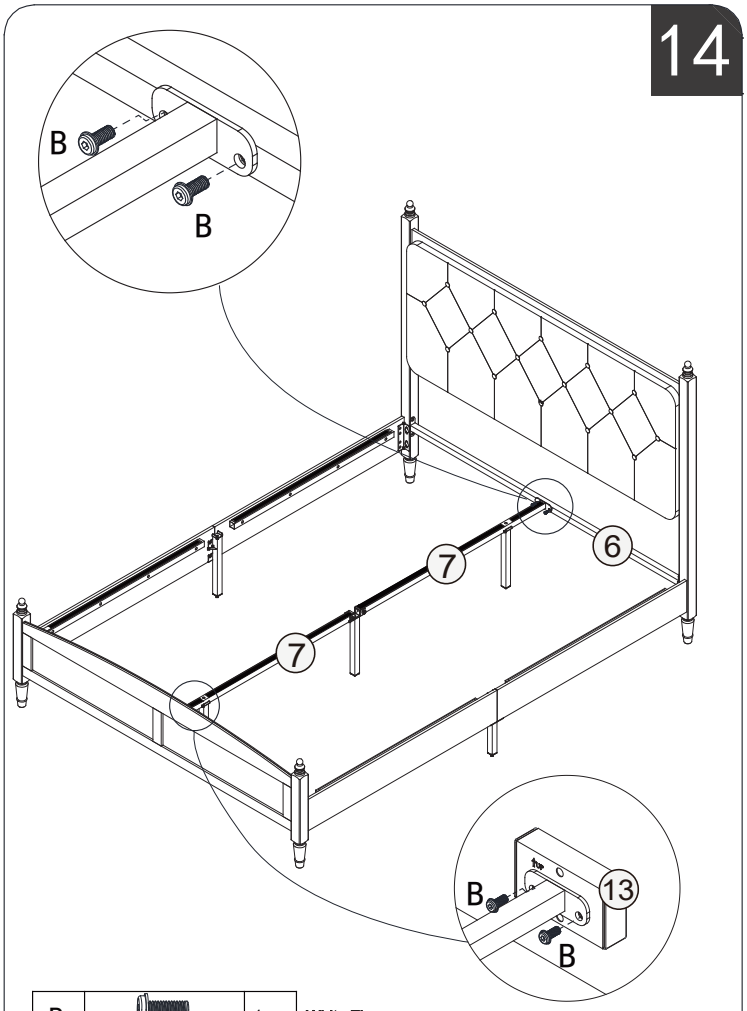


B	M8x20	4pcs	White Zinc

15

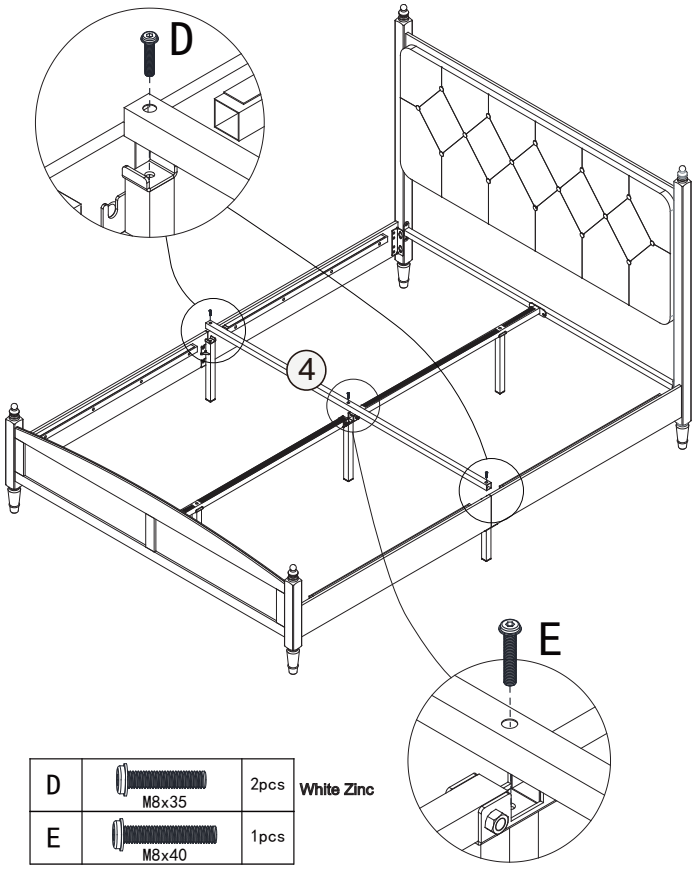

D	M8x35	2pcs	White Zinc
E	M8x40	1pcs	

16

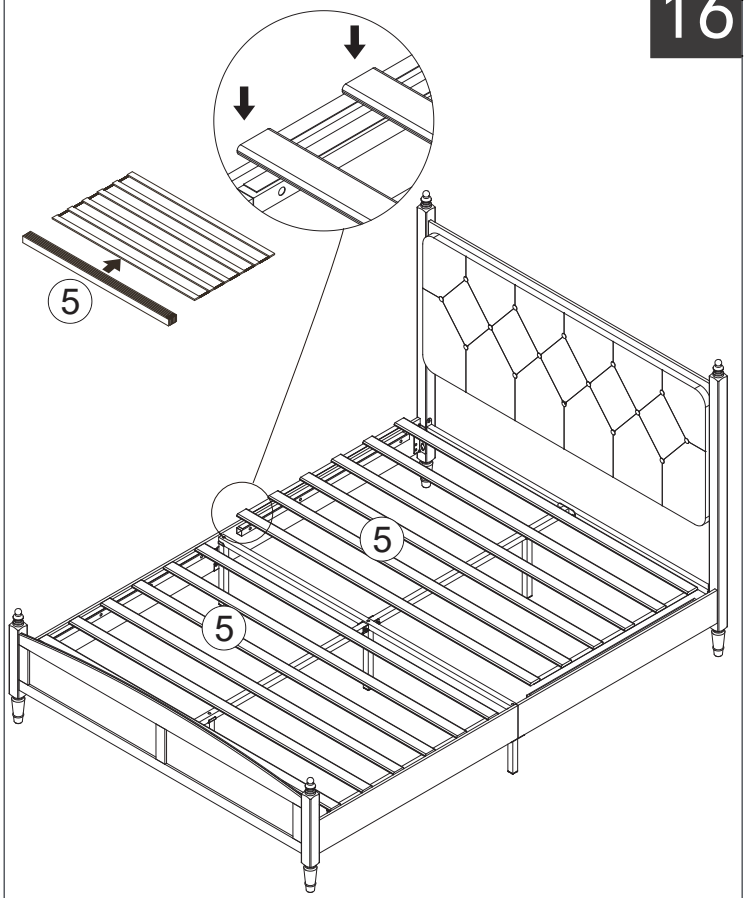



Note:Now you can tighten all the bolts.

Finish